




## Attachments

### Drip Tape Applicators

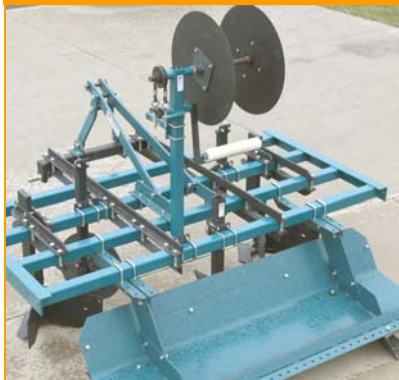

Add Drip Tape Applicator(s) to Bed Shapers to bury tape as beds are formed or re-formed. Leave a smooth bed top with consistent tape depth.

<b>1925-T</b>	<i>RH or LH</i>	<i>for 1321 - 1721</i>
<b>2125-TB</b>	<i>RH</i>	<i>for 2121 - 2331</i>
<b>2125-TBL</b>	<i>LH (2nd line)</i>	<i>for 2121 - 2331</i>
<b>4125-TB</b>	<i>RH</i>	<i>for 4521 - 4531</i>
<b>4125-TBL</b>	<i>LH (2nd line)</i>	<i>for 4521 - 4531</i>

ADD (1) Drip Tape Sub-Surface Guide for each unit

<b>20288</b>	<i>for 1321 - 1721 - 2121 - 2331</i>
<b>25288</b>	<i>for 4521 - 4531</i>

See Drip Tape Applicators (Section 7) for a complete listing. Custom multi-line set-ups also available

### Fertilizer Application



Conventional and practical granular and organic solutions for zone application on raised beds. Choice of hopper sizes.

Call for quote or local retailer for allied product

### Dry Wheel Punchers



Puncher wheels trailing a Bed Shaper are very practical to get ready to plant. Rows are perfectly aligned for precision cultivation.

<b>1706-PB</b>	<i>1-4 wheels</i>	<i>for 1321 - 1721</i>
<b>2006-PB</b>	<i>1-6 wheels</i>	<i>for 2121 - 2331</i>
<b>4006-PB</b>	<i>1-6 wheels</i>	<i>for 4521 - 4531</i>

See Dry Wheel Punchers (Section 9) for the complete listing of dry wheels and plant punches needed for a complete unit

### Plastic Mulch Application

Adjust bed width for proper application of plastic mulch. Mulch top width depends on mulch width and bed height.



Add mulch layers to Bed Shapers. Master one-pass bedding after conventional tillage to prepare seedbed soil. Bedder-Layer Combos can also be used with primary beds. Separate Mulch Layers are also available, which offers several advantages.

