



Options



121460 Poly Lining

for 1721

123560 Crowned Poly Lining

for 1721


122772 Poly Lining

for 2121 - 2331 - 4521 - 4531

124872 Crowned Poly Lining

for 2121 - 2331 - 4521 - 4531

Helps prevent soil from sticking to bottom of shaper pan, particularly in heavier or wetter soils.

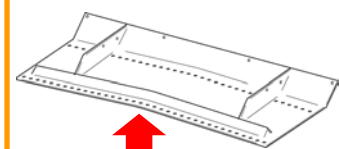

17281A Crowned Shaper Pan

for 1721

17316A Crowned Shaper Pan

for 2121 - 2331 - 4521 - 4531

Primary benefit is to ensure water drains off of beds covered with plastic mulch. Opinions vary on other purposes. The 'A' part numbers replace the standard flat shaper pan at the factory. The crowned pan part is available to retro-fit.



20394 Row Markers, 5-ft

for 1321 - 1721 - 2121 - 2331

20396 Row Markers, 7-ft

for 1321 - 1721 - 2121 - 2331

25394 Row Markers, 5-ft

for 4521 - 4531


25394 Row Markers, 7-ft

for 4521 - 4531

Beds can be spaced on 10-12 ft centers (for example) to provide drive-up access between beds. Use row markers for accurate spacing. Manually lowered and raised.



Part numbers are itemized on price list

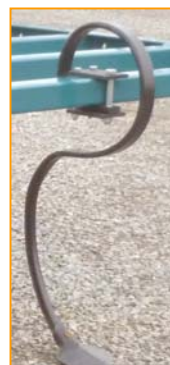

20115 S-Tine & Clamp

for 1321 - 1721

20136 S-Tine & Clamp

for 2121 - 2331

ADD Shovel

11556 Shovel, 2-1/4" HD

11557 Shovel, 4" HD

11558 Shovel, 7" HD

16398 Shaper Shovel, Left

16399 Shaper Shovel, Right

Re-work existing beds with S-tine tillage attachments in front of shaper pan. Working depth is adjustable on bed shaper. Shovels sold separately.

25178 S-Tine & Clamp

for 4521 - 4531

ADD Shovel

19557 Shovel, 4" HD

19558 Shovel, 7" HD



Open-Center Hitch

order with 'C' suffix
1721C-D 2121C-D 2331C-D
4521C-D 4531C-D

Equip Bed Shapers with open-center hitches. Like

Toolbar Cultivators, this frees the middle toolbar space to customize as needed or to set-up other equipment with the toolbar.

Multi-Tool Kits



Maximize investment or mechanize on a budget by utilizing the bed shaper toolbar to set-up other equipment like cultivators, bed lifters or mulch lifters.

See Multi-Tool Kit Master Catalog for a complete description